

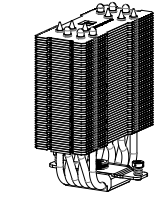
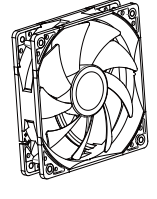
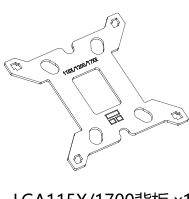











安装说明


Burst Assassin 120 系列

www.thermalright.com

配件清单

 A 散热器 x1	 B 风扇 x1 (PLUS x2)	 C LGA115X/1700背板 x1	
 D INTEL/AM4扣具 x2	 E 螺帽 X4	 F AM4螺柱 x4	 G 黑色胶柱 x4 Intel专用
 H 红色胶柱 x4 am4专用	 I 转接线x1 (PLUS专用)	 J 导热膏 x1	 K 风扇扣x4
 L 降噪脚垫 x4	 M 螺钉 x4	 N 蓝色胶柱x4 17xx专用	 O 塑胶垫 x4

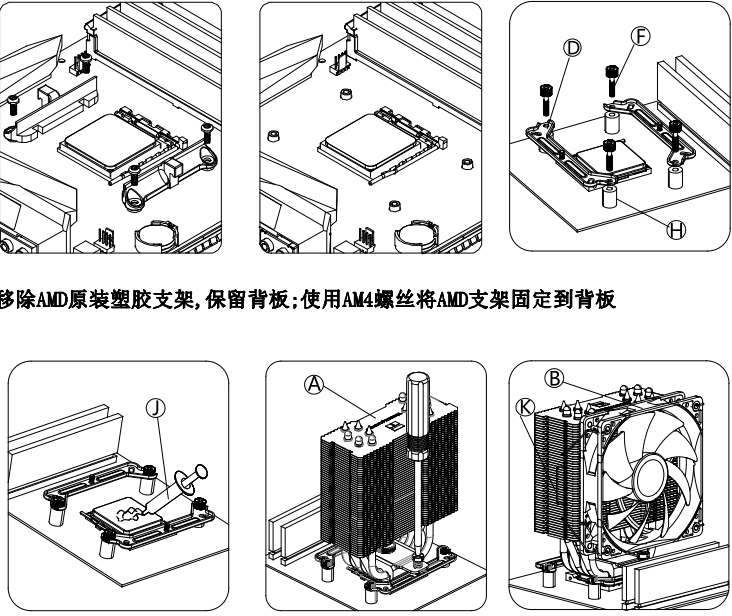
AMD AM4



移除AMD原装塑胶支架, 保留背板;使用AM4螺丝将AMD支架固定到背板

涂好导热膏, 然后先锁好散热器, 再固定风扇

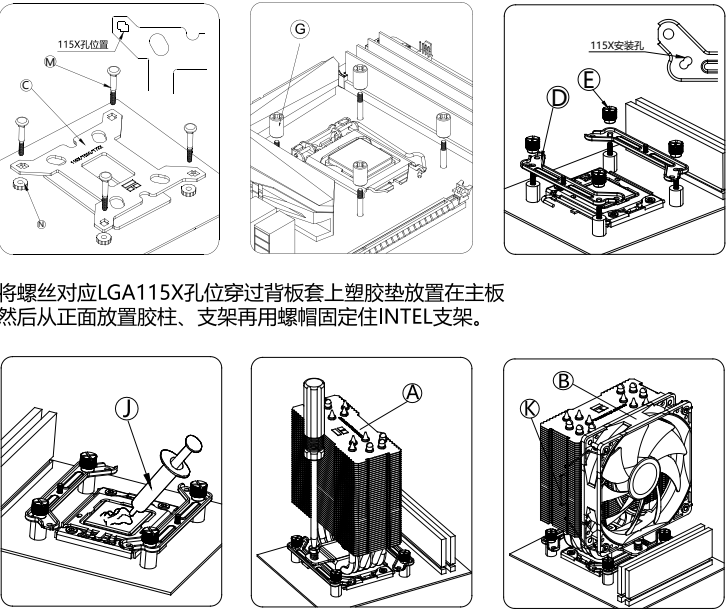
INTEL LGA115X/1200



将螺丝对应LGA115X孔位穿过背板套上塑胶垫放置在主板 然后从正面放置胶柱、支架再用螺帽固定住INTEL支架。

涂好导热膏, 然后先锁好散热器, 再固定风扇

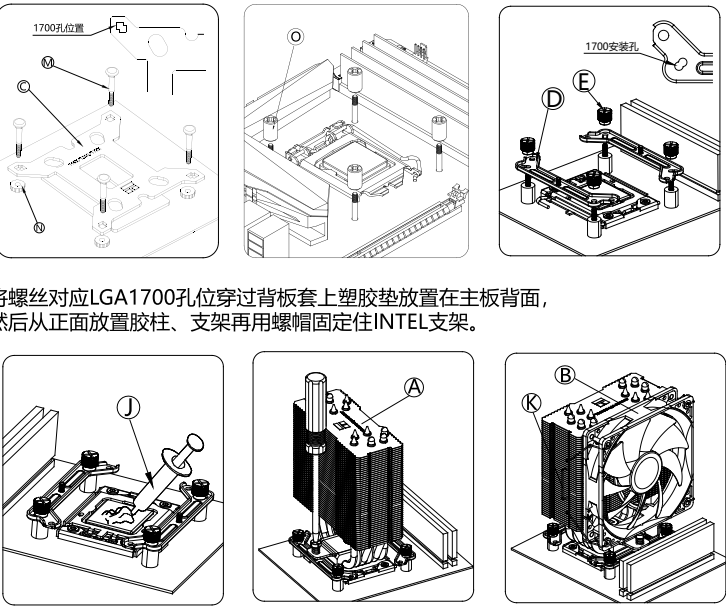
INTEL LGA1700



将螺丝对应LGA1700孔位穿过背板套上塑胶垫放置在主板背面, 然后从正面放置胶柱、支架再用螺帽固定住INTEL支架。

涂好导热膏, 然后先锁好散热器, 再固定风扇

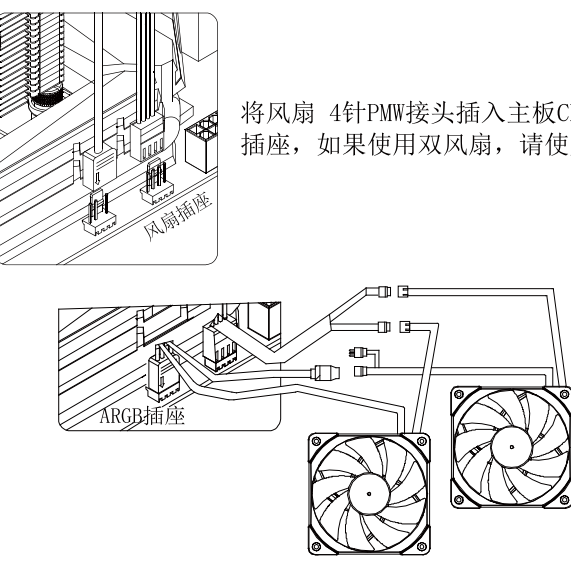风扇接线



将风扇 4针PWM接头插入主板CPU_FAN 插座, 如果使用双风扇, 请使用Y型转接线。

如果风扇有ARGB灯效, 请将ARGB 3针 (5V) 插入主板对应 ARGB灯效插座或者控制器, 多风扇之间可串联同步。

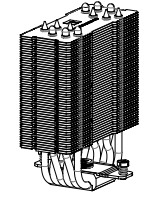
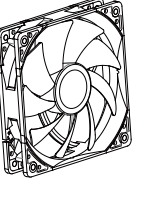
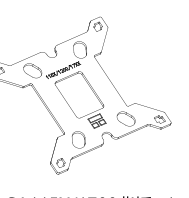













INSTALLATION GUIDE


Burst Assassin 120 Series

www.thermalright.com

parts list

 A Heatsink x1	 B FAN x1 (PLUS x2)	 C LGA115X/1700背板 x1	
 D INTEL/AM4 Bracket x2	 E Tightening Nut x4	 F AM4 Screw x4	 G 115X / 1200 Standoff x4
 H AM4 Standoff x4	 I Wire x1(use for plus)	 J Thermal Grease x1	 K FAN CLIP x4
 L Rebber Pad x4	 M Screw x4	 N 17XX Standoff x4	 O Plastic Washer x4

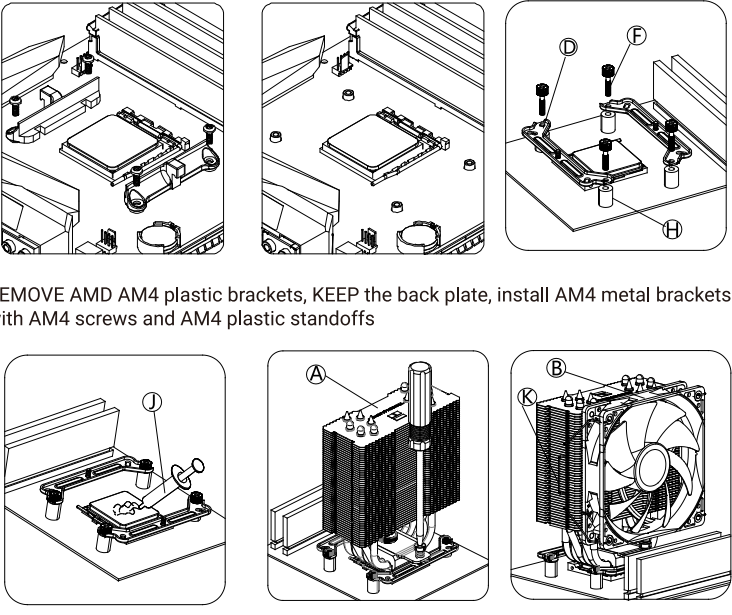
AMD AM4



REMOVE AMD AM4 plastic brackets, KEEP the back plate, install AM4 metal brackets with AM4 screws and AM4 plastic standoffs

Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

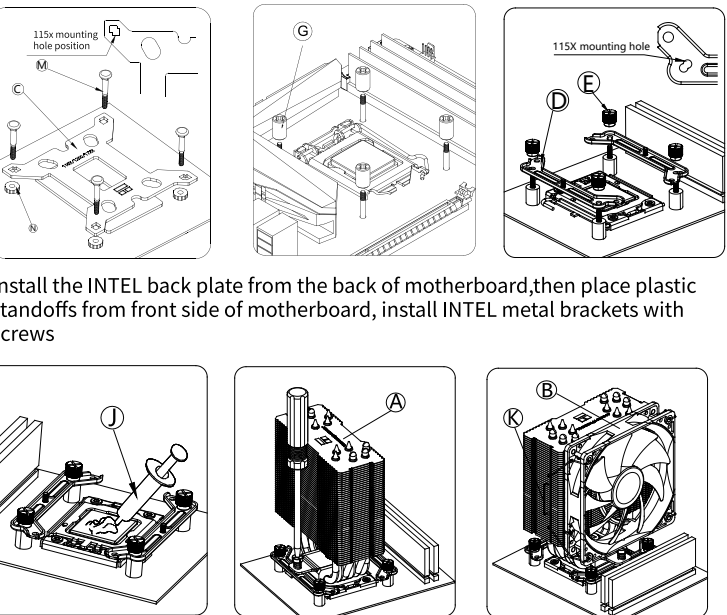
INTEL LGA115X/1200



Install the INTEL back plate from the back of motherboard,then place plastic standoffs from front side of motherboard, install INTEL metal brackets with screws

Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

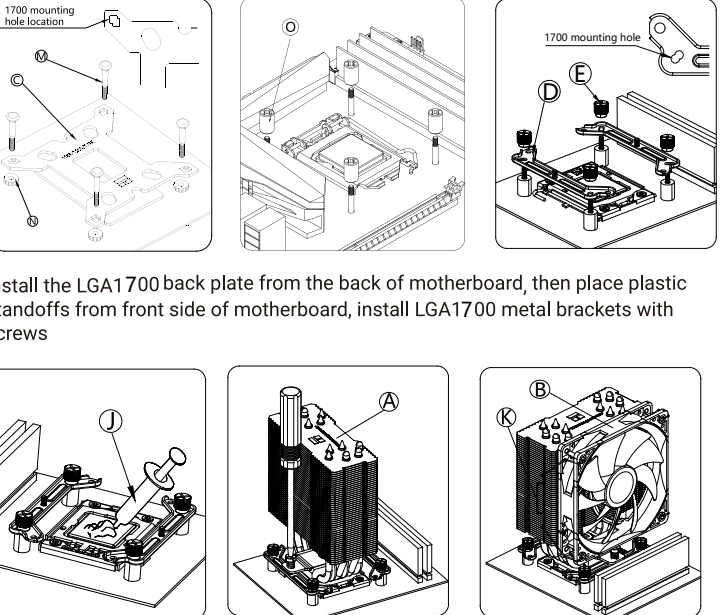
INTEL LGA1700



Install the LGA1700 back plate from the back of motherboard, then place plastic standoffs from front side of motherboard, install LGA1700 metal brackets with screws

Apply thermal grease on CPU, install the heatsink with a screw driver, and install fans on heatsink with fan clips

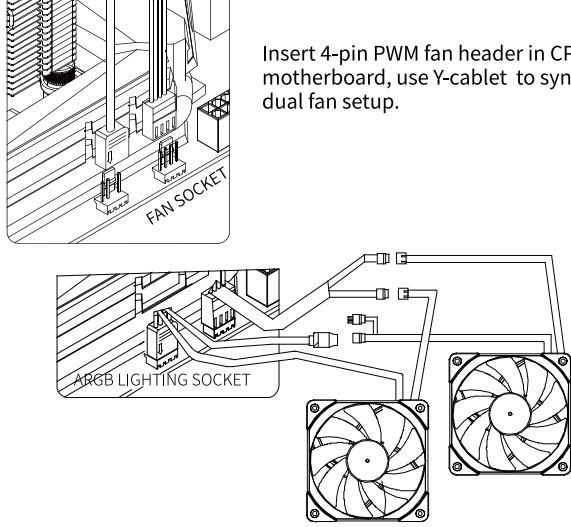Fan Wiring



Insert 4-pin PWM fan header in CPU_FAN socket on motherboard, use Y-cablet to sync fan speed for dual fan setup.

For Fans with ARGB lighting,To control the ARGB lighting , connect ARGB lighting header(3-pin +5V) to motherboard ARGB lighting socket or ARGB lighting controller,lighting effects can be sync by connecting fan lighting headers with each other