









Low Temperature high Performance

安装说明




TR-SILVER SOUL 110系列

www.thermalright.com




配件清单

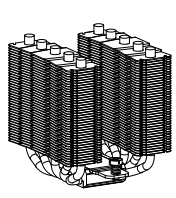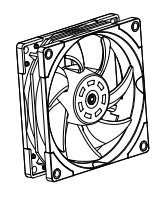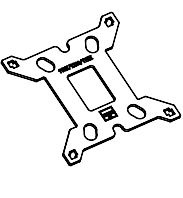 A 散热器x1	 B 风扇x1	 C LGA115X/1700背板 x1	
 D INTEL 支架 x2	 E AMD 支架 x2	 F 风扇扣 x4	 G 螺栓x4 Intel115X专用
 H LGA20XX螺栓x4	 I 螺丝x4 Intel 115X/20XX专用	 J 胶柱 x4 AM4专用	 K AM4螺丝 x4
 L 导热膏x1	 M 1700螺栓 x4	 N 塑胶垫 x4	 O 螺柱 x4

AMD AM4

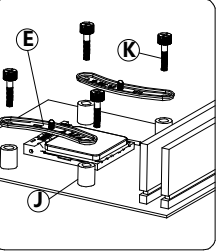
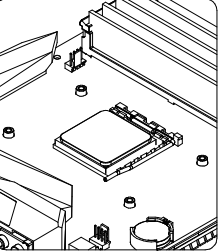
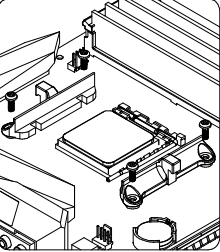


移除AMD 原装塑胶支架，保留背板；使用AM4胶柱锁紧到主板原配底板

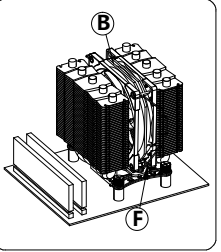
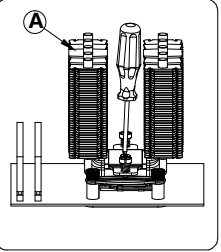
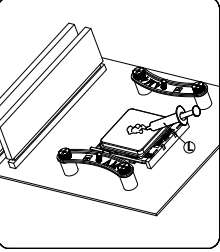


涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇

INTEL LGA115X/1200

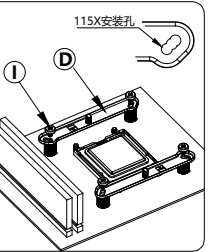
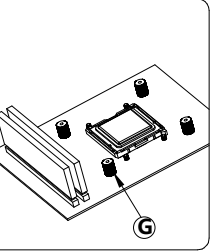
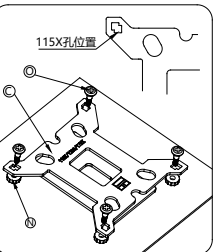


将螺丝对应LGA115X孔位穿过背板上塑胶垫放置在主板背面，然后从正面放置胶柱、支架再用螺帽固定住INTEL支架。

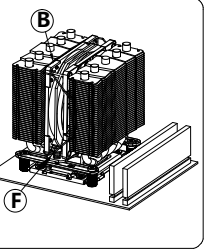
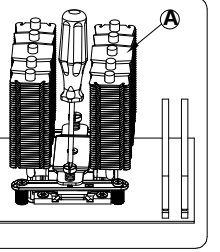
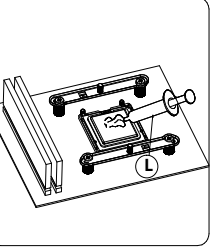


涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇

INTEL LGA20XX

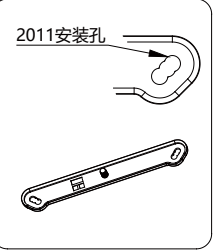
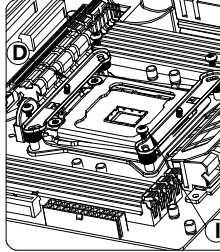
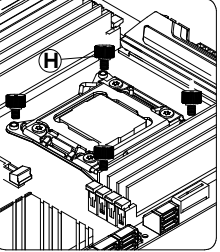


将LGA20XX螺柱拧到主板，然后放置支架，再用螺丝固定住INTEL支架。

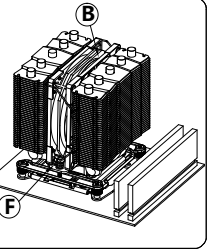
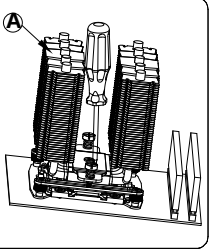
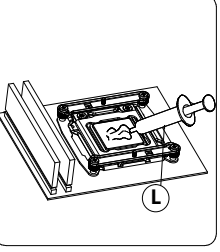


涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇

INTEL LGA1700

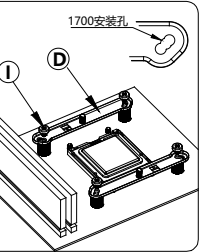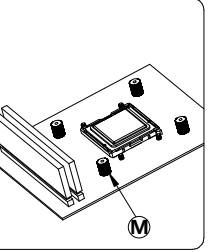
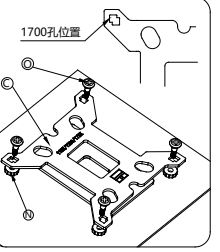


将螺丝对应LGA1700孔位穿过背板上塑胶垫放置在主板背面，然后从正面放置胶柱、支架再用螺帽固定住INTEL支架。

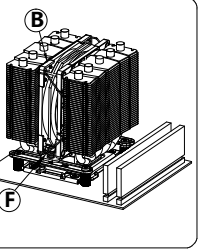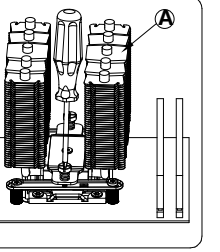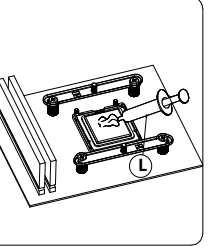


涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇

风扇接线

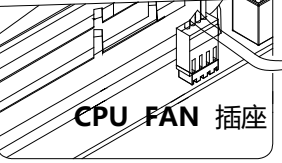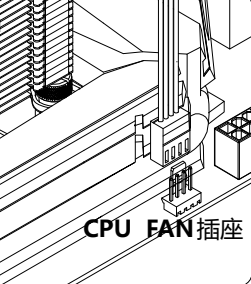

将风扇4针头插入主板CPU FAN 插座4针

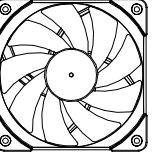



Low Temperature high Performance










Low Temperature high Performance

INSTALLATION GUIDE




TR-SILVER SOUL 110 Series

www.thermalright.com




Parts list

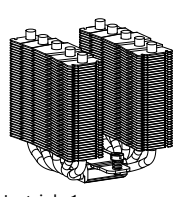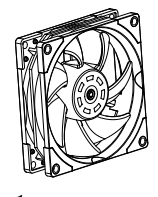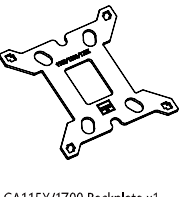 A Heatsinkx1	 B Fanx1	 C LGA115X/1700 Backplate x1	
 D INTEL Bracket x2	 E AMD Bracket x2	 F Fan Clip x4	 G Double-screw bolt x4
 H LGA20XX Screw x4	 I Screw down x4 Intel 115x 20xx	 J Stsndoff x4	 K AM4 Screw x4
 L Thermal Greasa x1	 M 1700screw bolt x4	 N Plastic pad x4	 O screw bolt x4

AMD AM4

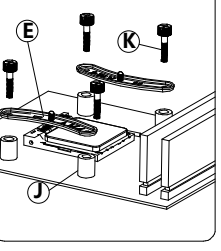
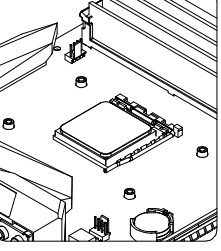
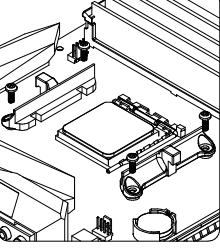


Remove theAMDoriginal plastic support,keep the back plate,and lock it to the original motherboard base plate with AM4 rubber column.

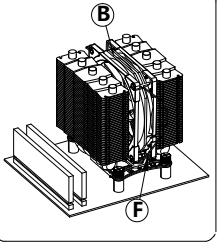
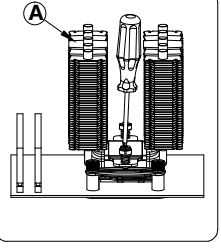
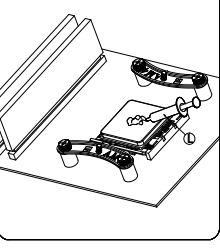


Apply the hot paste, lock the main body with a screwdriver, and fix the fan with a fan wire.

INTEL LGA115X/1200

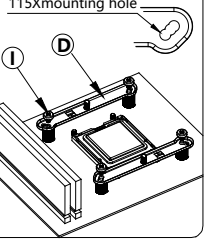
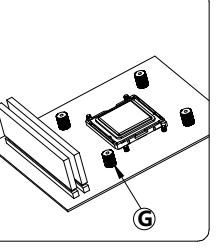
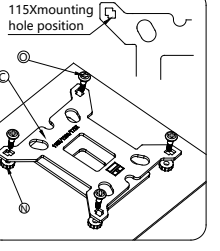


Install the INTEL back plate from the back of motherboard,then place plastic standoffs from front side of motherboard, install INTEL metal brackets with screws

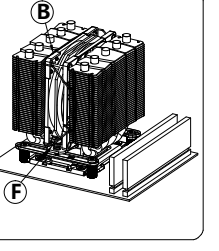
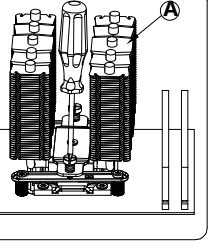
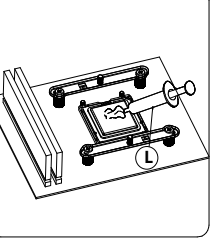


Apply the hot paste, lock the main body with a screwdriver, and fix the fan with a fan wire.

INTEL LGA20XX

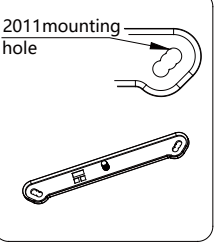
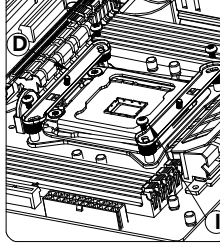
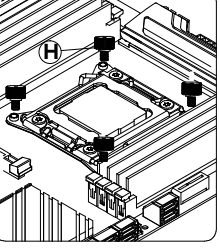


Thread in the LGA20XX screws;put on the brackets and then tightening with nuts.

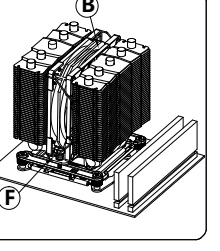
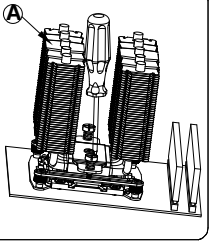
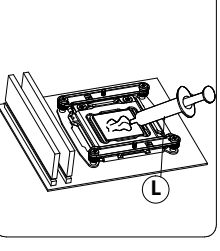


Apply the hot paste, lock the main body with a screwdriver, and fix the fan with a fan wire.

INTEL LGA1700

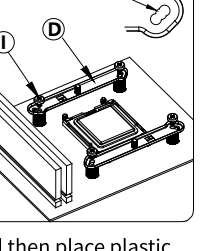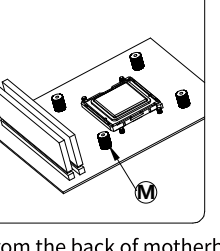
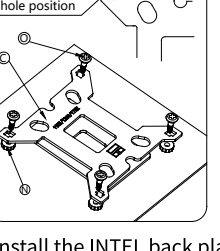


Install the INTEL back plate from the back of motherboard,then place plastic standoffs from front side of motherboard, install INTEL metal brackets with screws

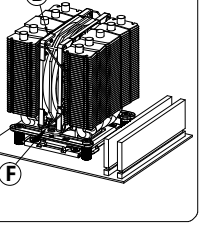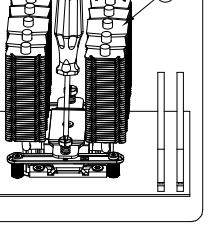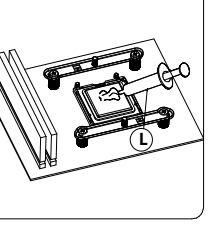


Apply the hot paste, lock the main body with a screwdriver, and fix the fan with a fan wire.

Fan wiring

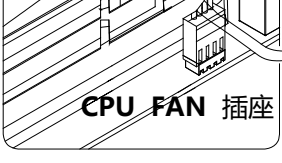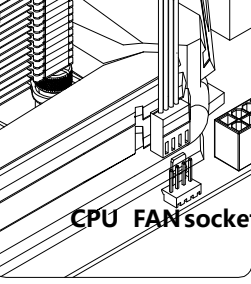

Insert the fan 4 pin into the main board CPU fan socket 4P

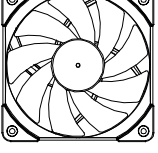



Low Temperature high Performance