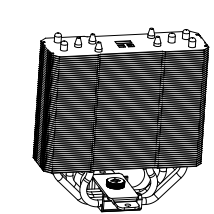
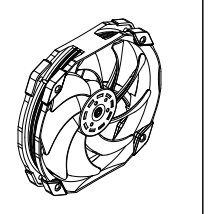
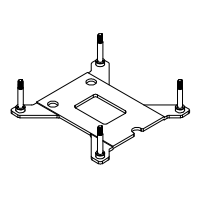
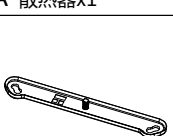
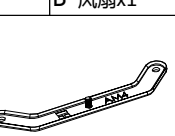

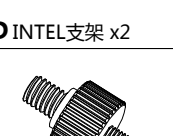


www.thermalright.com




安装说明

TR-TA140 EX Series




配件清单

|                                                                                                    |                                                                                                   |                                                                                                      |                                                                                                |
|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <br>A 散热器x1       | <br>B 风扇x1     | <br>C LGA115X背板X1 |                                                                                                |
| <br>D INTEL 支架 x2 | <br>E AMD 支架 x2 | <br>F 风扇扣 x4      | <br>G 胶柱 x4 |
| <br>H LGA20XX螺丝x4 | <br>I 螺母X4      | <br>J AM4螺丝X4     | <br>K 导热膏X1 |
| <br>L Y型转接线 x1    | <br>M 紧固螺丝x2    |                                                                                                      |                                                                                                |

AMD AM4

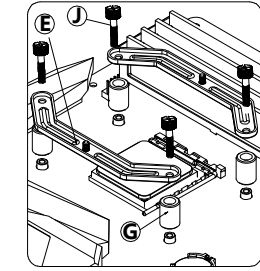
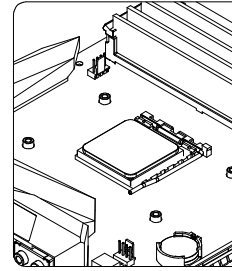
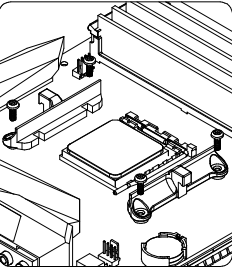


移除**AMD** 原装塑胶支架，保留背板；使用**AM4**螺丝将AMD支架固定到背板

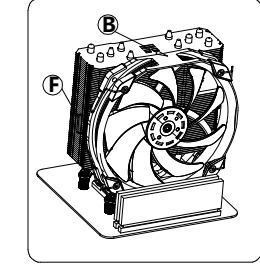
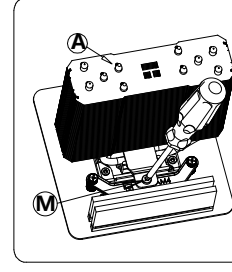
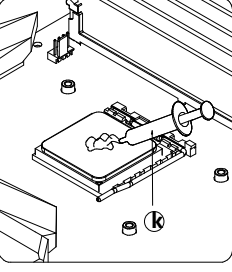


涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇。

INTEL LGA115X

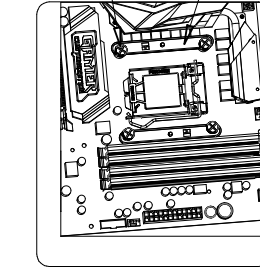
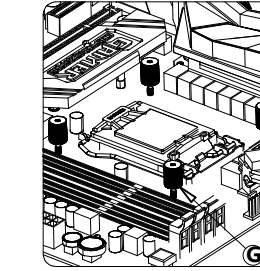
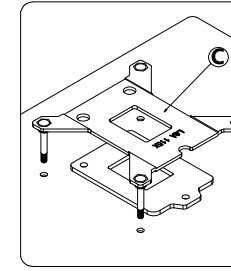


将**LGA115X**背板放置在主板背面，然后从正面放置胶柱、支架再用螺帽固定住INTEL 支架。

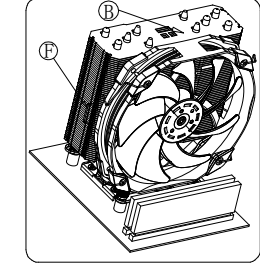
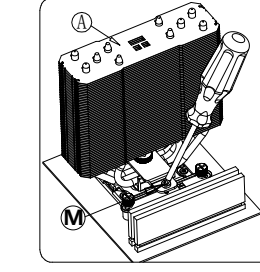
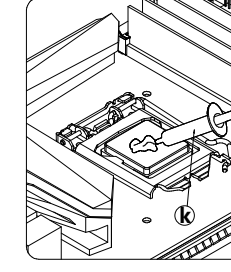


涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇。

INTEL LGA20XX

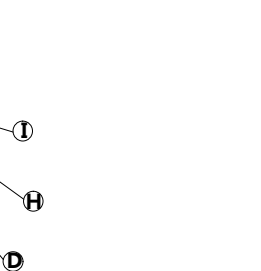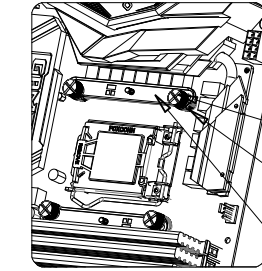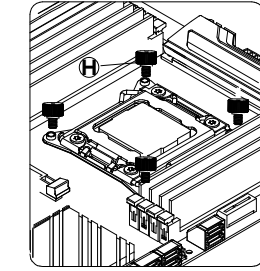


将**LGA20XX**螺柱拧到主板，然后放置支架，再用螺帽固定住INTEL 支架。

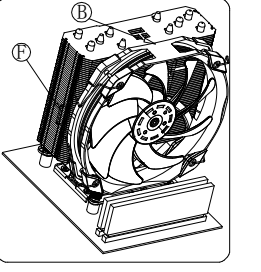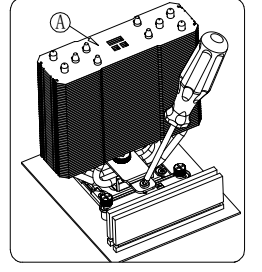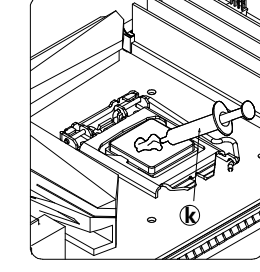


涂好导热膏，然后用螺丝刀锁好主体，再用风扇线扣固定风扇。

风扇接线

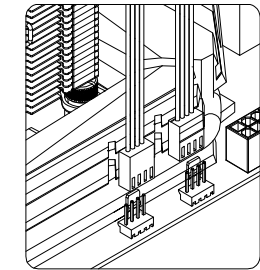

将风扇 4针PMW接头插入主板CPU FAN 插座  
如使用双风扇，请使用Y型转接线。

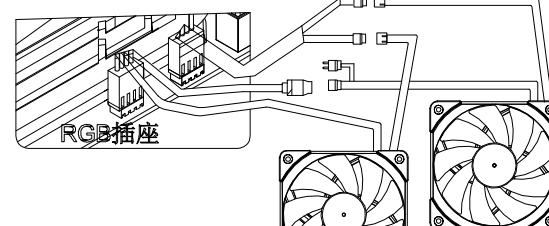

如风扇有RGB灯效 请将RGB灯效;  
针（5V）/4针（12V）插入主板对应 RGB灯  
效插座或者控制器，多风扇之间为串联。










www.thermalright.com

www.thermalright.com




安装说明

TR-TA140 EX Series




Parts list
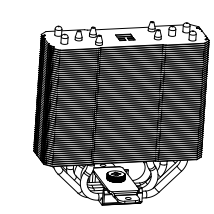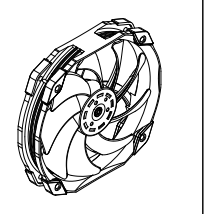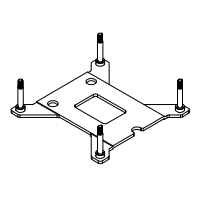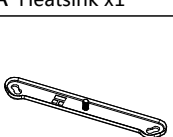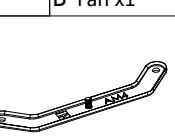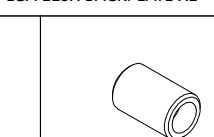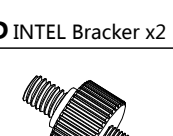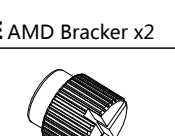
|                                                                                                               |                                                                                                              |                                                                                                                 |                                                                                                              |
|---------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| <br>A Heatsink x1           | <br>B Fan x1             | <br>C LGA 115X BACKPLATE X1 |                                                                                                              |
| <br>D INTEL Bracker x2     | <br>E AMD Bracker x2     | <br>F Fan Clip x4          | <br>G Stsndoff x4       |
| <br>H LGA20XX screw x4     | <br>I Tightening Nut X4  | <br>J AM4 Screw X4         | <br>K Thermal Greasa X1 |
| <br>L Ymodel palch cord x1 | <br>M Fastening screw x2 |                                                                                                                 |                                                                                                              |

AMD AM4

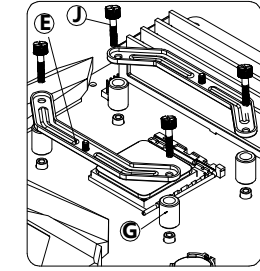
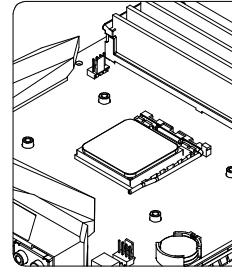
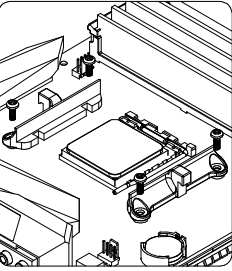


Remove plastic retention bracket,but keep the backplate;secure the brackets using the AM4 screws

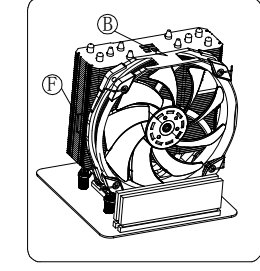
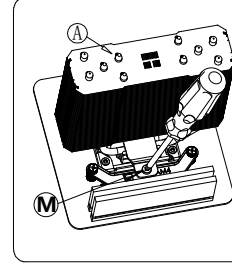
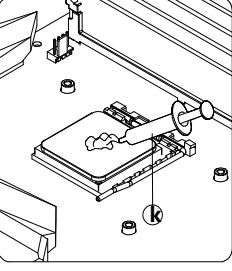


Apply a thin layer of thermak grease; and then secure heatsink

INTEL LGA115X

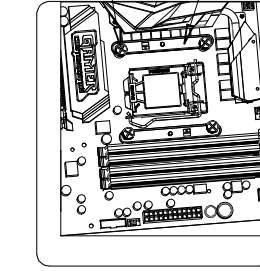
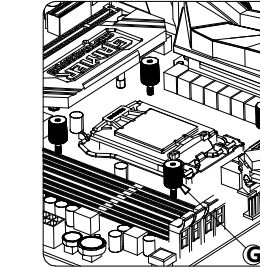
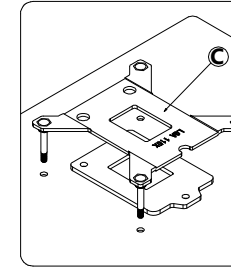


put the backplate through the back of the motherboard;put on the standoffs and the LGA115Xbrackest,and then tightening the nuts to secure.

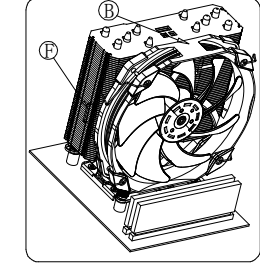
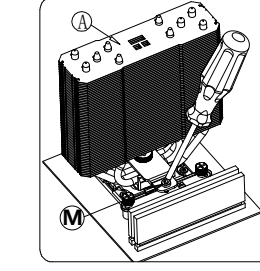
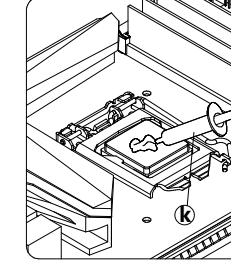


Apply a thin layer of thermal grease; and then secure heatsink.

INTEL LGA20XX

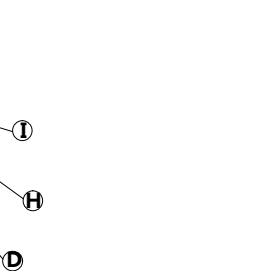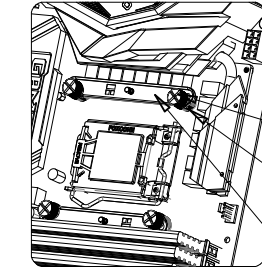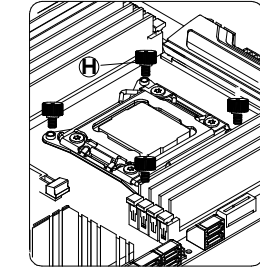


Thread in the**LGA20XX**screws;put on the brackets and then tightening with nuts.

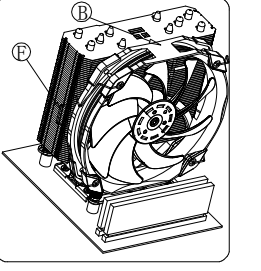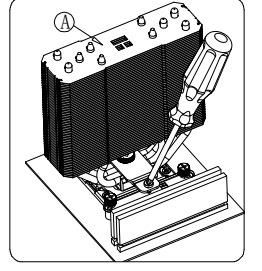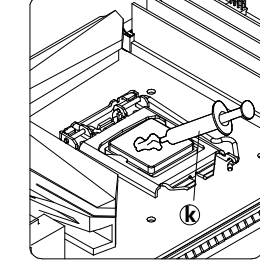


Apply a thin layer of thermal grease; and then secure beatsink.

Fan wiring

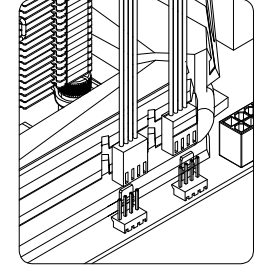

Insert the 4-pin PMW connector of the FAN into the CPU FAN socket of the motherboard.For double fans, please use y-type connector.

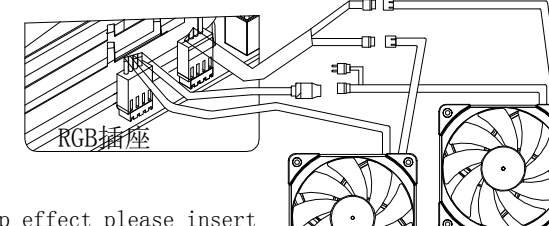

if the fan has RGB iamp effect please insert RGB lamp effect 3-pin (5V)/4-pin (12V) into the motherboard corresponding to RGB lamp effect socketor controller,and connect multiple fans in serirs

www.thermalright.com